

THOMSON



COFFEE MAKER 4/6 CUPS

Thank you for your purchase.

Before using the appliance, please read this user manual. Please keep it for future reference or for another user, if you lend or resell the appliance.

This appliance allows you to prepare hot coffee in your vehicle. Check that the voltage of the cigarette lighter socket supplied by your vehicle corresponds to the voltage of the product.

WARNING : This appliance is available in 12 V or 24 V version. Make sure that the voltage available in your vehicle corresponds to the voltage of the appliance indicated on the rating plate.

IMPORTANT

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or persons lacking experience or knowledge, unless they have been given supervision or prior instructions concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the power cord is damaged, do not use the appliance. Have the power cord replaced by the manufacturer, its after-sales service or similarly qualified persons in order to avoid any danger.
- Your appliance is intended for domestic use only and inside your vehicle.
- This appliance must be used by an adult. Do not leave it within the reach of children (risk of burns).
- **Do not use the coffee maker while driving.** Use it on a flat, hard surface where it is not likely to tip over.

- Do not immerse the coffee maker.
- Do not exceed the maximum water capacity.
- Do not put the appliance, power cord or plug in water or any other liquid.
- Always follow the cleaning instructions to clean your appliance:
 1. Unplug the appliance.
 2. Do not clean the appliance when it is hot.
 3. Clean with a damp cloth or sponge.
 4. Never place the appliance in water or under running water.
- **WARNING:** Risk of injury if the appliance is used incorrectly.
- **WARNING:** After use, do not touch the warming plate, which is subject to residual heat.
- Make sure to only touch the handle of the glass carafe during heating and until it has cooled down completely.
- The temperature of accessible surfaces may be high when the appliance is in operation. Do not touch the hot surfaces of the appliance.
- Children must not play with the appliance. Cleaning and user maintenance must not be carried out by children without supervision.
- Always unplug the coffee maker after use, in order to protect your battery.
- Do not leave the appliance plugged in unattended or after leaving the vehicle.
- Make sure that the contacts of your vehicle's cigarette lighter socket are in good contact with the device's socket. If there is debris in the vehicle's cigarette lighter socket or if the contact is not perfect (plug not properly inserted for example), there is a risk of poor contact causing significant heating of the socket. In such a case, unplug immediately and check the contacts.

HOW TO USE:

Before first use, wash the tank, filter and filter holder as well as the accessories with hot water to remove residue and dust. Run your filter coffee maker for the first time without coffee with the equivalent of a carafe of water to rinse it.

Make sure the appliance is placed on a stable surface.

Set the switch to the "o" (off) position and fill the tank with water.

The water level must be between the "2" and "6" marks printed on the tank.

Add the amount of water required according to the number of cups desired without ever exceeding the maximum level ("Max").

Add ground coffee to the filter compartment. Plug the appliance into the vehicle's cigarette lighter socket.

Set the switch to the I (on) position. The indicator light comes on to indicate that the coffee maker is working properly.

To stop the appliance, set the switch to the "0" (off) position then unplug the cigarette lighter plug.

The heating time can be quite long (up to 20 minutes depending on the voltage of your battery and the volume of water used. Preparation time (indicative) -Time to heat 1 to 6 cups of cold water:

| | |
|-----|-------------|
| 12V | 10 – 40 min |
| 24V | 5 – 20 min |

Cleaning:

Always unplug the appliance before cleaning.
Clean the tank and accessories with water and dishwashing liquid.
The exterior of the coffee maker can be cleaned with a cloth and a little soapy water.

For descaling, use a coffee maker descaling product following the manufacturer's instructions.

Maintenance:

In the event of a problem or damage to the cable, do not disassemble the product. Entrust it to a specialist. Defects due to improper use of the appliance and damage due to intervention or repair by a third party or due to the installation of non-original parts are not covered by the supplier's liability.



End of life appliance:

When your appliance reaches the end of its life, do not throw it away in nature. Take it to a specialized waste center. Respect the environment and the regulations in force in your country.

Your appliance contains many recoverable or recyclable materials. Entrust it to a collection point or, failing that, to an approved service center so that it can be processed.

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE) requires that used household appliances are not thrown into the normal municipal waste stream. Used appliances must be collected separately in order to optimize the recovery rate and recycling of the materials they are made of and reduce the impact on human health and the environment.

Spécifications :

| | |
|--|--|
| Réf. 722201 | Réf.722202 |
| Model : CM-326B | Model : CM-326B |
| Supply voltage : 12V  | Supply voltage : 24V  |
| Power : 170W | Pwer : 300W |

Fabriqué en Chine – Importé par: HTC Equipements
10, Rue Jean Bourgois, Zone Artisanale, 59147 Gondecourt - France



V1.0 (11/24)

This product has been manufactured and sold under the responsibility of HTC SAS. THOMSON, and the THOMSON logo are trademarks used under license by HTC SAS – for more information: www.thomson-brand.com. All other products, services, company names, brands, trade names, product names and logos referenced herein are the property of their respective owners.