

THOMSON

ELECTRIC MUG



Thank you for your purchase.

Before using the device, please read this instruction manual. Please keep it for future reference or for another user, if you lend or resell the device.

This appliance allows you to keep a drink hot in your vehicle. Check that the voltage of the cigarette lighter socket supplied by your vehicle corresponds to the voltage of the product.

CAUTION: This device is available in 12 V or 24 V versions. Make sure that the voltage available in your vehicle corresponds to the voltage of the device indicated on the rating plate.

IMPORTANT

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or persons lacking experience or knowledge, unless they have been given supervision or prior instructions concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the power cord is damaged, do not use the appliance. Have the power cord replaced by the manufacturer, its after-sales service or similarly qualified persons in order to avoid any danger.
- Your device is intended for domestic use only and inside your vehicle.
- This device must be used by an adult. Do not leave it within the reach of children (risk of burns).
- **Do not use the mug while driving.** Use it on a hard, flat surface where it won't tip over.
- Do not immerse the mug.
- Do not exceed the maximum water capacity of the large cup.
- Do not put the appliance, power cord or plug in water or any other liquid.
- Always follow the cleaning instructions to clean your appliance;
 - Unplug the appliance.
 - Do not clean the appliance while it is hot.
 - Clean with a damp cloth or sponge.

- Never put the device in water or under running water.
- **WARNING:** Risk of injury if the device is used incorrectly
- The temperature of accessible surfaces may be high when the appliance is in operation. Do not touch the hot surfaces of the appliance.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Always unplug the mug after use to protect your battery.
- Do not leave the device plugged in unattended or after leaving the vehicle.
- Make sure that the contacts of your vehicle's cigarette lighter socket are in good contact with the device's socket. If there is debris in the vehicle's cigarette lighter socket or if the contact is not perfect (for example, the socket is not properly inserted), there is a risk of poor contact causing the socket to heat up significantly. In such a case, unplug immediately and check the contacts.

USAGE

Before first use, wash the tank and cup of your mug with hot water to remove residue and dust. Run your mug for the first time with 0.5 liters of water to rinse it and discard the water.

Make sure the device is placed on a stable surface.

Fill the water tank without ever exceeding the capacity of the large cup.

Plug the device into the vehicle's cigarette lighter socket.

The indicator light on the cigarette lighter comes on to indicate that the mug is working properly.

To turn off the device, unplug the cigarette lighter plug.

Cleaning

Always unplug the appliance before cleaning. Clean the tank and accessories with water and dishwashing liquid. The exterior of the mug can be cleaned with a cloth and a little soapy water.

For descaling, use a descaling product for appliances containing food liquids following the manufacturer's instructions.

Care and maintenance

If there is any problem or damage to the cable, do not disassemble the product.

Leave it to a specialist.

Defects due to improper use of the device and damage due to intervention or repair carried out by a third party or due to the installation of non-original parts are not covered by the supplier's liability.

Failures

- Replacing the fuse, the cigarette lighter socket contains a safety fuse, to replace it, unscrew the end of the cigarette lighter socket and replace the fuse using a fuse of the same size.
- Check the indicator light on the cigarette lighter socket which will tell you if your product is working correctly following your fuse replacement.



Device at end of life

When your device reaches the end of its life, do not throw it away in nature. Take it to a specialized waste center. Respect the environment and the regulations in force in your country.

Your device contains many recoverable or recyclable materials. Take it to a collection point or, failing that, to an approved service center so that it can be processed.

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that used household appliances are not disposed of in the normal municipal waste stream. Used appliances must be collected separately in order to optimise the recovery rate and recycling of the materials they are made of and reduce the impact on human health and the environment.

Specifications

Ref. 722301		Ref.722302	
Model	:75522-HY	Model	:75522-HY
Supply voltage	: 12 V 	Supply voltage	: 24 V 
Power	: 31.2W	Power	:67.2 W

Made in China – Imported by: HTC Equipment
10, Rue Jean Bourgois, 59147 Gondecourt - France



V1.0 (11/24)

This product has been manufactured and sold under the responsibility of HTC SAS. THOMSON, and the THOMSON logo are trademarks used under license by HTC SAS – for more information: www.thomson-brand.com. All other products, services, company names, brands, names Trademarks, product names and logos referenced herein are the property of their respective owners.

