

THOMSON

ELECTRIC OVEN 24V



Thank you for your purchase.

Before using the device, please read this instruction manual. Please keep it for future reference or for another user, if you lend or resell the device.

This device allows you to heat and cook in your vehicle. Check that the voltage of the cigarette lighter plug supplied by your vehicle corresponds to the voltage of the product

IMPORTANT


- **Do not use the device while the vehicle is moving.**
- **WARNING : Never operate while driving.**
- This appliance operates at high temperatures that can cause burns. Do not touch the exposed metal parts or glass.
- Do not touch internal walls or accessories without gloves or protection.
- This appliance is not intended to be operated with an external timer or by a separate remote control system.
- If any problem occurs, do not attempt to repair the device yourself. Contact a qualified technician.
- Do not use an extension cord to plug in the appliance.
- Place the appliance on a stable surface and do not let the cord hang down.
- Check that the voltage of your vehicle corresponds to that of the device (24 V).
- Do not use your device if:
 - Its cord or cigarette lighter plug is defective or damaged,
 - The device fell,
 - It presents visible damages or operating anomalies.
- Never disassemble the device yourself.
- **Do not operate the appliance near flammable materials (dashboard, seats, etc.). Make sure to leave enough free space around the oven.**
- This device has been designed for private use only. Any professional use, improper use or use not in accordance with the instructions for use does not engage the responsibility or the guarantee of the manufacturer and the distributor.

- Unplug the appliance when not in use and before cleaning.
- Allow the appliance to cool before cleaning.
- Never move the device while in use.
- Be careful not to obstruct air intakes or exhaust openings.
- Do not use the oven unattended and turn off the oven after use.
- CAUTION: The temperature of accessible surfaces may be high when the appliance is operating.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or persons lacking experience or knowledge, unless they have been given supervision or prior instruction concerning use of the appliance by a person responsible for their safety.
- **THIS OVEN IS NOT A TOY** : Keep out of reach of children. Adult use only.
- Do not immerse the oven, cord or plug of the appliance.

IMPORTANT:

Make sure that the contacts of your vehicle's cigarette lighter socket are in good contact with the device's socket. If there is debris in the vehicle's cigarette lighter socket or if the contact is not perfect (for example, the socket is not properly inserted), there is a risk of poor contact causing the socket to heat up significantly. In such a case, unplug immediately and check the contacts.


DESCRIPTION

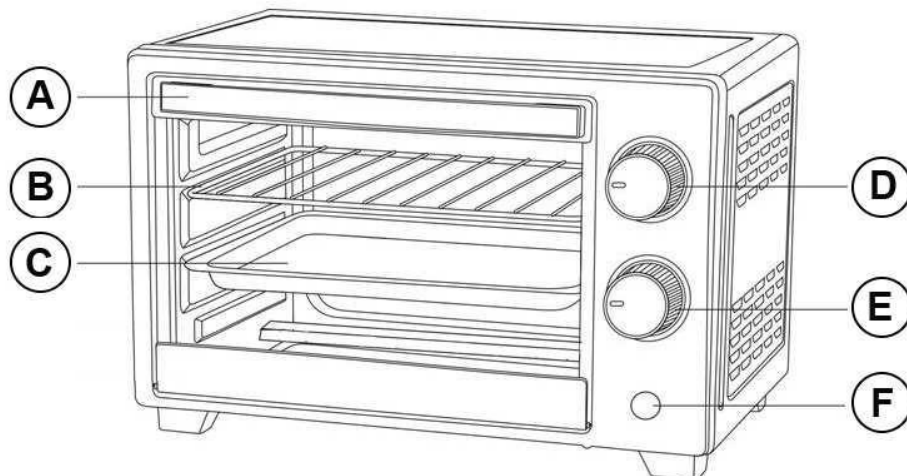




- A. Handle
- B. Back rack
- C. Back pan

- D. Cooking mode
- E. Timer
- F. LED power

BEFORE FIRST USE

1. Carefully unpack the oven, making sure to remove all packaging materials.
2. Clean the oven and accessories with a moist and soapy sponge. Dry thoroughly.
3. Remove all accessories from the oven.
4. Unwind the power cord completely and plug it in.
5. Turn on the oven.
6. Close the door.
7. Set the cooking mode to  (both resistors heat simultaneously).
8. Run your appliance for 15 minutes.
9. **ATTENTION : You will observe smoke escaping from the oven. This is normal and will disappear progressively during this first time use.**

Using the Oven

- Plug the device into a 24V cigarette lighter plug (this product does not work on a 12V battery).
- Place the function selector to the desired position:
 - : only the lower resistance heats to cook or reheat a dish without grilling.
 - : only the upper resistance heats to grill the dish.
 - : the two resistors heat simultaneously to cook, reheat and grill your dish.
 - **OFF**: Stop
- Set the cooking time using the timer, the numbers of which indicate the time in minutes. Cooking will begin when you have selected a cooking time. When the oven is heating, the indicator light lights up.
- When the timer stops, a bell will sound.
- If you want to stop cooking before the time selected on the timer, turn the timer knob to the "0" position.
- Carefully open the oven door, preferably using an oven mitt.
- Unplug the oven after use.



Use only when parked.

Do not leave the appliance running unattended.

Cleaning

- Allow your oven to cool completely before cleaning and unplug the power cord.
- The hob can be cleaned like other kitchen utensils, either by hand or in the dishwasher.
- Always use a damp sponge to clean the exterior surfaces. Avoid using abrasive products that could damage the coating. Make sure that water or soap does not enter the oven through the oven vents.
- Never immerse the oven in water.
- To clean the interior walls, never use corrosive products (spray detergents) and never scratch the walls with sharp or pointed objects.
- The oven should be cleaned regularly and any food deposits removed.

Care and maintenance

If there is any problem or damage to the cable, do not disassemble the product.

Leave it to a specialist.

Defects due to improper use of the device and damage due to intervention or repair carried out by a third party or due to the installation of non-original parts are not covered by the supplier's liability.

Failures

- Replacing the fuse, the cigarette lighter socket contains a safety fuse, to replace it, unscrew the end of the cigarette lighter socket and replace the fuse using a fuse of the same size.
- Check the indicator light on the cigarette lighter socket which will tell you if your product is working correctly following your fuse replacement.

Device at end of life


When your device reaches the end of its life, do not throw it away in nature. Take it to a specialized waste center. Respect the environment and the regulations in force in your country.

Your device contains many recoverable or recyclable materials. Take it to a collection point or, failing that, to an approved service center so that it can be processed.

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that used household appliances are not disposed of in the normal municipal waste stream. Used appliances must be collected separately in order to optimise the recovery rate and recycling of the materials they are made of and reduce the impact on human health and the environment.

Specifications

Ref. 722805

Model : JK09B
Supply voltage : 24 V 
Power : 300W
Ability : 9L
Temperature : 100°C – 230°C
Fuse in the Cigarette lighter plug: Glass Model 15A

Made in China – Imported by: HTC Equipment
10, Rue Jean Bourgois, 59147 Gondecourt - France



V1.0 (11/24)

This product has been manufactured and sold under the responsibility of HTC SAS. THOMSON, and the THOMSON logo are trademarks used under license by HTC SAS – for more information: www.thomson-brand.com. All other products, services, company names, brands, trade names, product names and logos referenced herein are the property of their respective owners..